



Installation Instructions


DD-C-JK4-07

Pet/ Cargo divider for JK
WRANGLER UNLIMITED 2007 - UP
J4PC07R3**


**VIDEO INSTALLATION INSTRUCTIONS CAN BE FOUND AT
WWW.DIRTYDOG4X4.COM**

-Thank you for purchasing a Dirtydog 4x4 netting system. Please read these instructions fully to familiarize yourself with the installation. Set aside 40 minutes for the first time you install your cargo divider. Installation can be done with roof on or off.

Start with the 4 top straps. The dirtydog tag should be upright and face forward, The 4 straps wrap around the roll bar and connect through the ladderlocks Center the divider equally along the bar. (The photos taken from the rear of the vehicle). The top horizontal strap should run along the top of the roll bar when positioned correctly.

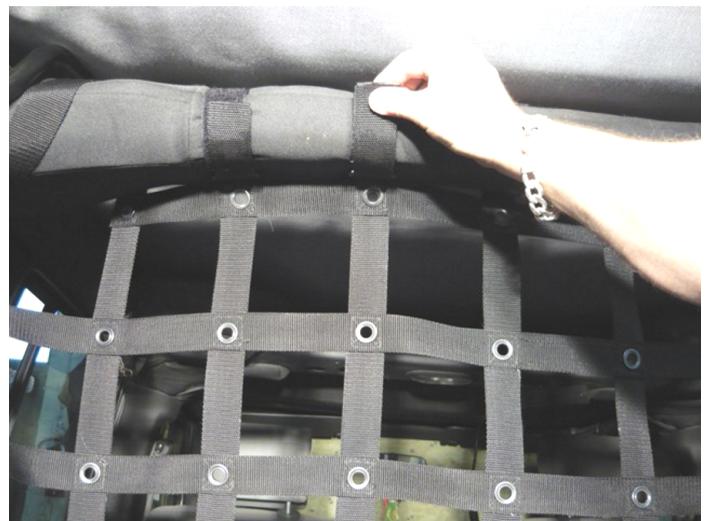

The outside strap at the top wraps around toward the back and up around the side of the roll bar and velcro's on to the strap running along the top. You made need to adjust this strap after the next step is performed. You should now have 6 six straps along the top in stalled. The picture below is a view from the front side. Make sure your divider is positioned forward and not toward the back of the roll bar. The very top vertical strap runs along the top of the roll bar and cannot be seen in the photo.

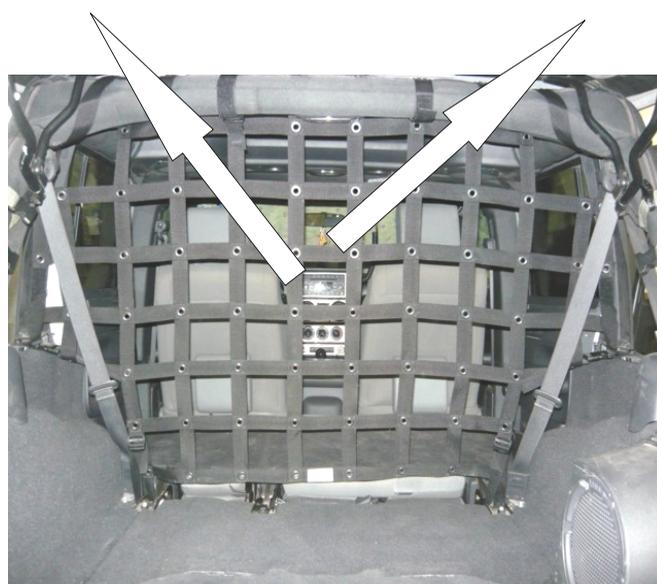

The next step is the straps at the bottom. These are a little tricky. At the bottom of the seat bracket that bolts to the floor. The bracket has two layers of steel with a slot space in between. This is where you need to slide in the webbing. It takes a little wiggling to get it through.



Once this is done the strap attaches to the ladderloc buckle hanging off the strap two over



Next attach the ladderloc and loop with the grommet strap to the hardtop bolt. The ladderloc is on top and the loop hangs below. We have provided a longer bolt if the existing hard top bolt is to short. We have also provided a nut and washer for none hard top owners.



Be sure to pull the seatbelt forward before attaching the next straps. If you do not plan on using the seat belts you can leave them as they are.



Attach the horizontal strap through the loop and connect to the ladderloc on the strap below it as shown.



Wrap the strap at the top around the side roll bar and connect it to the ladderloc on the adjacent strap. The last step is now to connect the bottom of this strap to the ladderloc that you attached to the truck in the last step



REAR VIEW



FRONT VIEW

Any excess straps that hang out can be tucked in under it's self. Adjust and tighten straps as needed to even out the net so it is positioned properly. Your net comes with a 3 year warranty against manufacturing defects. Cuts, abrasions, sun faded items are not covered under the warranty.

Dirtydog 4x4
6-2045 Dundas St. E.
Mississauga, ON
Canada 1-855-704-0708
Question? Call or email orderdesk@dirtydog4x4.com